


MOBILE TOTE TRAY CABINET

MTTC SERIES ASSEMBLY INSTRUCTIONS

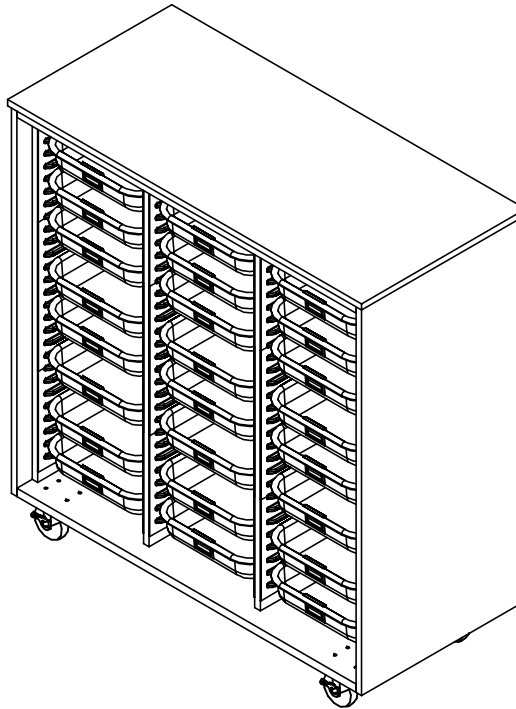

NOTE:

1. MODEL VIEWS MAY NOT REPRESENT EXACT MODEL PURCHASED

DWN BY:	EMK	DWN DATE:	11/11/14
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES
CABINET SQUARENESS $\pm .0625$
FRACTIONAL VALUES $\pm 1/32"$
- ALL VALUES \pm OVERALL -



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
MOBILE TOTE TRAY CABINET
ASSEMBLY INSTRUCTIONS

A	CREATED ASSEMBLY INSTRUCTIONS	11/11/14	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.

REVISION LEVEL

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION

DRAWING NUMBER:

MTTC SERIES

SCALE:

NTS

SHEET:

1 OF 3

REVISION:

REV A

TOOLS REQUIRED

1/2" WRENCH

ADJUSTABLE PLIERS

ASSEMBLY COMPONENTS

ITEMS INCLUDED	PART #	PART DESCRIPTION	QTY
CASTERS	100081	CASTER,4IN SWIVEL TOP PLATE, W/BRAKE	4
CASTER HARDWARE KIT	235317	CASTER,ASSY,HDWRE,16-SCREWS, 16-NUTS	1
TOTE TRAYS	100135	TOTE TRAY, T-188	24

NOTE:

1.

DWN BY:	EMK	DWN DATE:	11/11/14
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES
CABINET SQUARENESS ± .0625
FRACTIONAL VALUES ± 1/32"
- ALL VALUES ± OVERALL -

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
MOBILE TOTE TRAY CABINET
TOOLS AND ASSEMBLY COMPONENTS

A	CREATED ASSEMBLY INSTRUCTIONS	11/11/14	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECN NO.

REVISION LEVEL

DRAWING NUMBER:

MTTC SERIES

SCALE:


NTS

SHEET:

2 OF 3


REVISION:

REV A

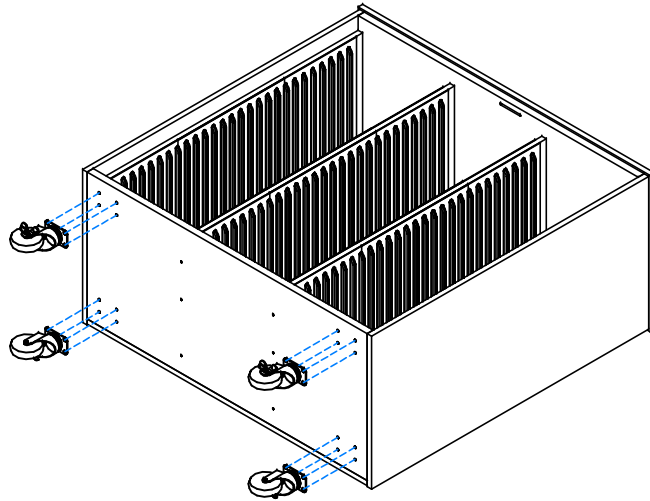

STEP 1:

LAY CABINET ON SIDE. ATTACH CASTERS FROM INSIDE THE CABINET USING THE HARDWARE PROVIDED.

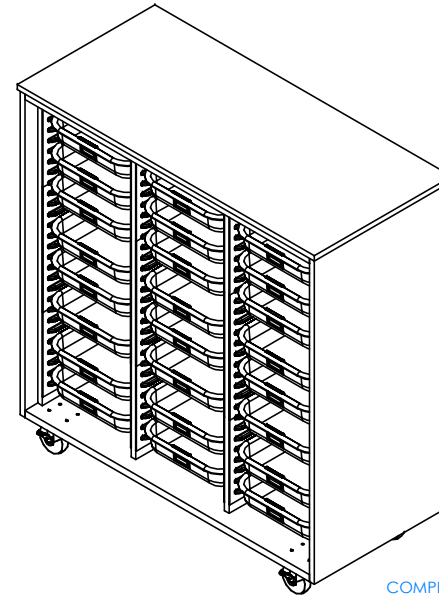

COMPLETE UNIT SHOWN

STEP 2:

TIP CABINET UP. PLACE TOTE TRAYS IN AND SET CABINET IN DESIRED LOCATION. PLACE TOTE TRAYS INSIDE CABINET.

NOTE:

1.

DWN BY:	EMK	DWN DATE:	11/11/14
APR BY:		DATE APR:	
APR BY:		DATE APR:	

UNLESS OTHERWISE SPECIFIED
DIMENSION ARE IN INCHES
CABINET SQUARENESS $\pm .0625$
FRACTIONAL VALUES $\pm 1/32"$
- ALL VALUES \pm OVERALL -

A	CREATED ASSEMBLY INSTRUCTIONS	11/11/14	EMK	-
REV.	DESCRIPTION	DATE	NAME	ECH NO.

REVISION LEVEL

THIS DRAWING IS THE SOLE PROPERTY OF
DIVERSIFIED WOOD CRAFTS. IT MAY NOT
BE ALTERED OR CHANGED WITHOUT
PERMISSION



300 South Krueger Street
Suring, WI 54174
diversifiedwoodcrafts.com

TITLE:
MOBILE TOTE TRAY CABINET
ASSEMBLY INSTRUCTIONS

DRAWING NUMBER:

MTC SERIES

SCALE:

NTS

SHEET:

3 OF 3

REVISION:

REV A